

End Seal Kit

3101-TT

Installation instructions

The end seal kit terminates and seals self-regulating heat cables.



KIT CONTENTS

Item	Description	Quantity
A	1/2" Shrink End Cap	1
B	1" x 1" Mastic Tape	2

(866) 635-8123

www.thermaltechusa.com




THERMAL
TECHNOLOGIES

INSTRUCTIONS



1. About 3 inches from the cable end, score the circumference of the outer cable jacket.

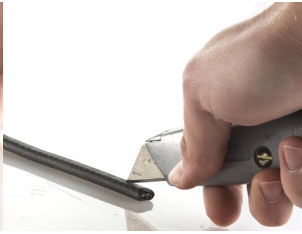

2. Create a slit from to the end of the cable.



3. Flex the scored points and remove the outer jacket.



4. Push the braid back toward and over the cable jacket. Trim braid as desired. This braid will be covered with heat shrink.



5. Trim the heater cable end, leaving approximately 1 inch below the outer jacket.



6. At the cable end, create a "V" notch.



7. Using the mastic tape, "diaper" the cable end.



8. Slide the shrink end cap over the cable end and over the braid.



9. Heat until completely shrunk and adhesive escapes the boot end.